

Diva Plus VXS/BXS 6008 Elena SXS/SBS 6510 User Manual

IFB
Set Yourself Free

TRUSTED BY OVER **7 MILLION** SATISFIED CUSTOMERS



UF421PKMAN536

F

www.ifb.com | January 2024

Shop 24x7 @ www.ifbappliances.com | Email customerservice@ifbglobal.com | Call 080 458 45678/080 695 45678
www.facebook.com/IFBappliances twitter.com/IFBappliances www.instagram.com/ifbappliances/
www.youtube.com/channel/UCJTIHxPTfez4mrbVBIQLb9Q




Read instructions before switching on the washing machine. Observe safety guidelines for installation.




Welcome to the IFB family.

India's best fully automatic washing machine is now at your service.
Here's to your freedom!

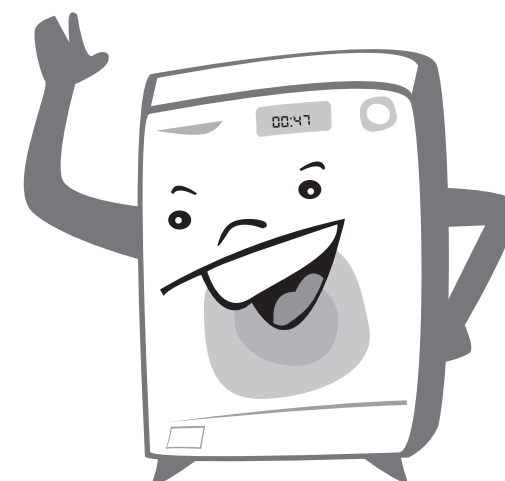


The A to Z of your washing machine

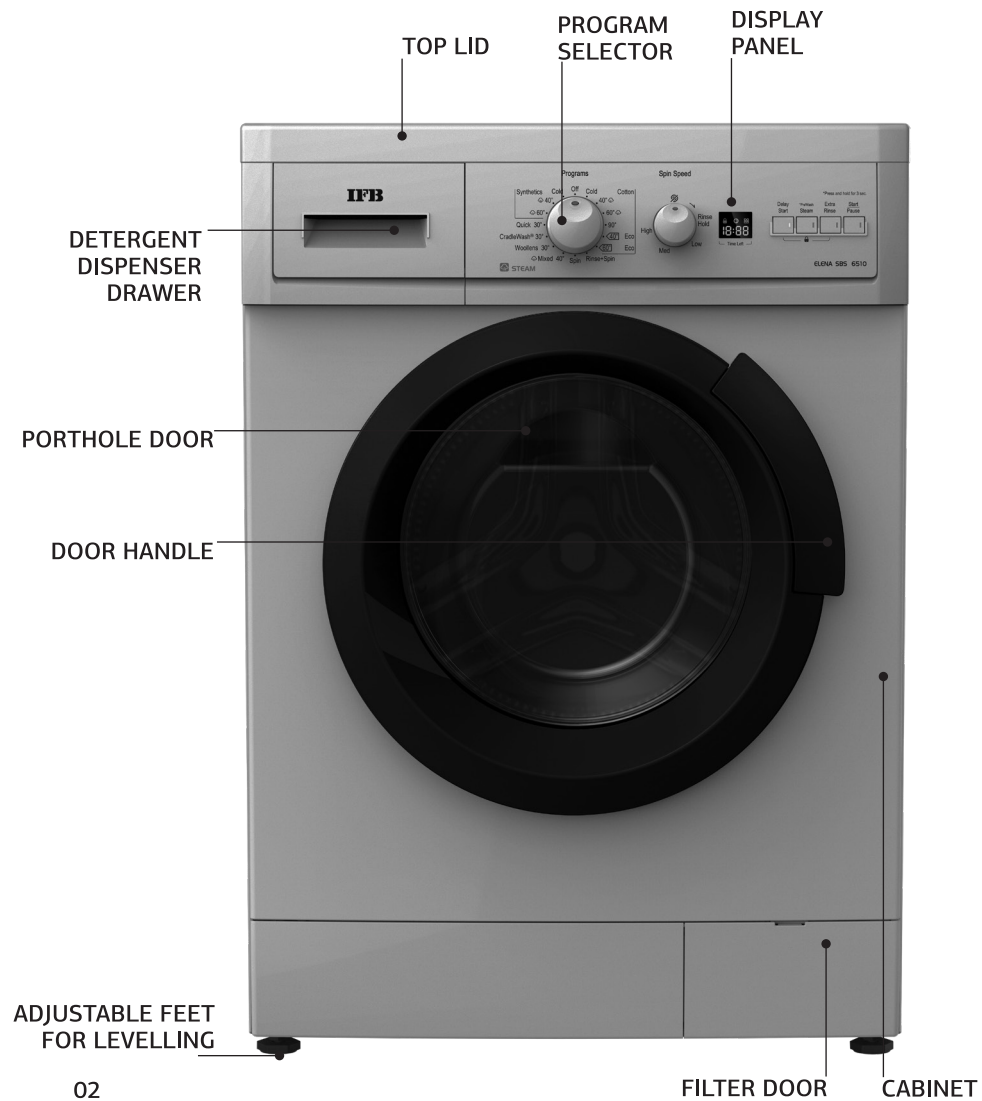


START/PAUSE

DISPLAY

WASH OPTIONS
Delay Start
Pre Wash/Steam
Extra Rinse

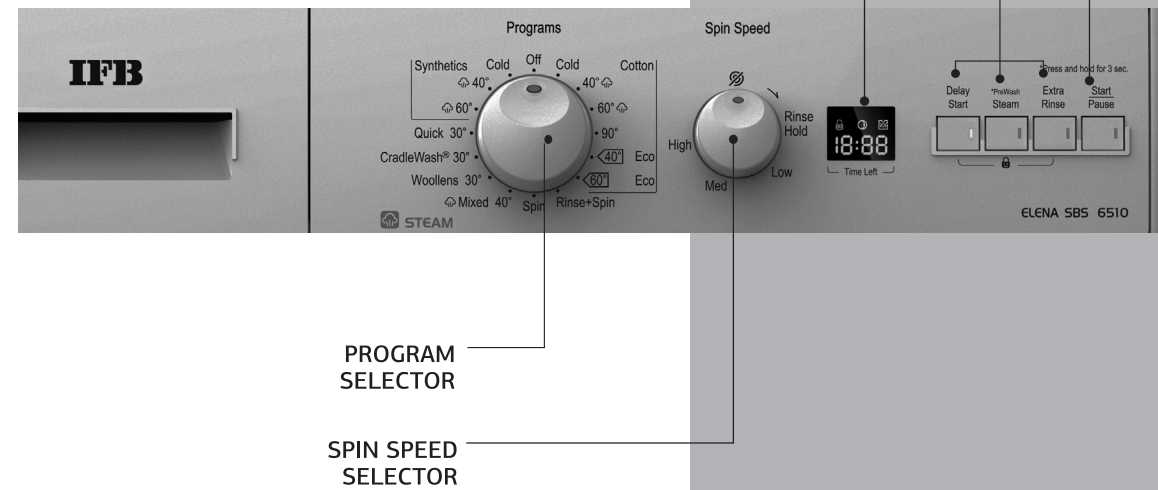

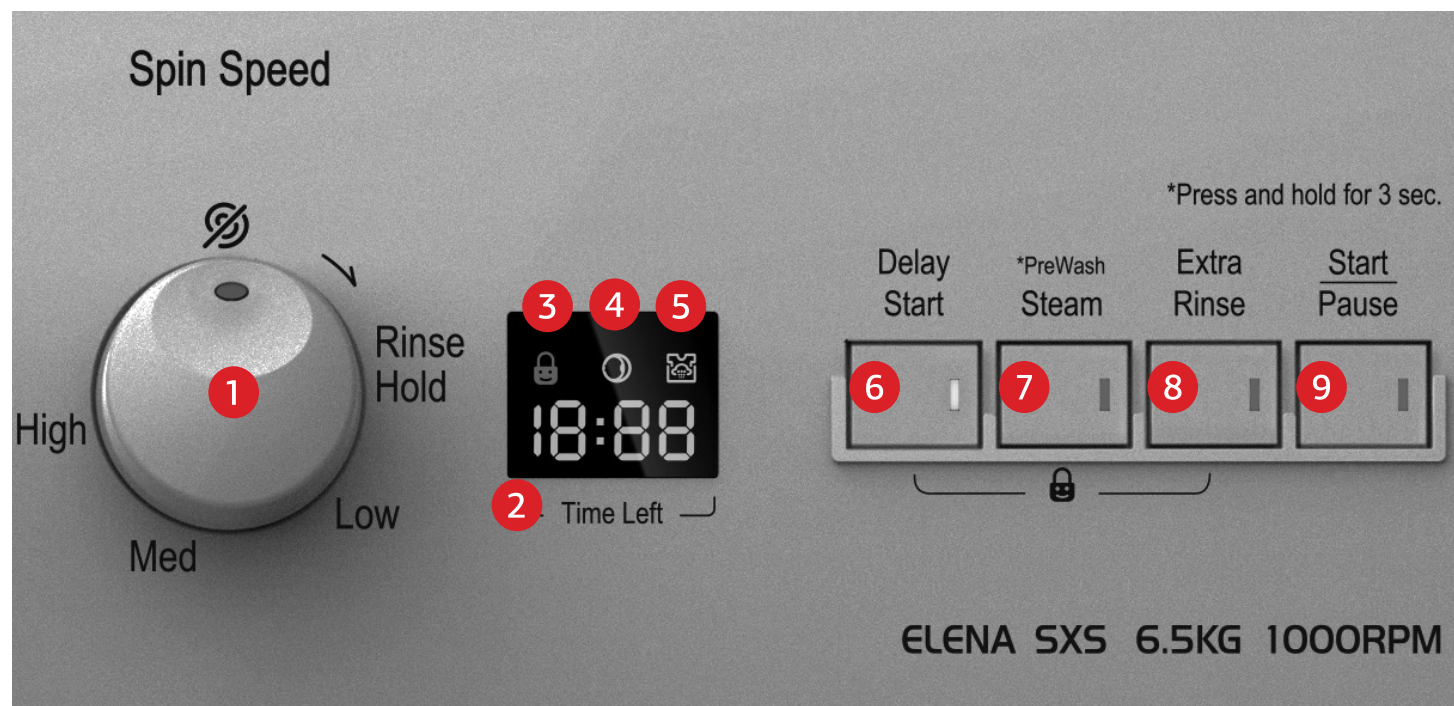

Display Descriptions

- ① Spin Speed: Rotate the knob to desired spin speed to set the required spin speed.
- ② Time Left: Indicates status of program time left.
- ③ Child Lock: Glows when child lock is selected. Flashes to indicate de selection
- ④ Door Status: Shows door status. Glows when door is open, flashes during door unlocking and goes OFF when door is locked.
- ⑤ Steam: Glows when Steam option is selected.
- ⑥ Delay Start: Button to select Delay start option.
- ⑦ Pre Wash: Button to select Pre wash/Steam option.
- ⑧ Extra Rinse: Button to select Extra Rinse option.
- ⑨ Start/Pause: Button to start or pause the machine or program.



Safety guidelines for installation

- Keep the packaging material. It may come in handy when shifting residence.
- Old hoses must not be reused. Always use the new hoses delivered with the machine.
- Before cleaning the machine, ensure you disconnect the main electricity supply and take the plug off the socket.
- Not removing all the packaging and transit bolts before using the appliance may lead to serious damage. Please do not operate the machine until the transit bolts have been removed.
- All washing machine installation work must be carried out only by authorised IFB Care Service Personnel.
- Pre-installation work such as plumbing and electrical connections must be carried out by a qualified fitter, electrician or technician.
- Do not operate the appliance where inflammable substances such as oil, benzene or highly inflammable gas are present. Such materials may cause fire or explosions. Never use combustible detergents.
- Do not install your washing machine in rooms where temperatures below freezing may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point and above 50°C.
- Install the machine in a room with adequate ventilation. Avoid a room with no windows. The back of the machine should be at least 4 inches (100 mm) away from the wall.
- The machine is provided with ventilating openings on the base. Always put the machine on the floor after removing the carpet.
- Do not install the machine in a damp area or bathroom with exposure to a direct shower.
- Protect the machine from direct sunlight and rainfall.



- Do not place the machine on a slanting, uneven or unstable surface.
- A concrete floor is the most suitable installation surface for a washing machine, being far less prone to vibration during the spin cycle than wooden floorboards.
- The washing machine is not suitable for connection to a hot water supply.
- The machine is designed to operate with water flow pressure between 0.3 Bar–10 Bar. Lower water pressure can lead to malfunction of your machine.



Safety instructions

Read all instructions and explanations for installation carefully before use.
Follow the instructions carefully. Keep the operating instructions handy for later use.

Any damage, which may be caused by cockroaches or other vermin, will not be covered by the appliance guarantee.

- Do not install and use a damaged machine. Before connecting the machine, ensure that the connection data on the data plate (fusing, voltage and frequency) match the main electricity supply. If in any doubt, consult IFB Care.
- Do not wash or dry articles that have been cleaned, washed, soaked in or dabbed with combustible or explosive substances (such as oil, paint, gasoline, degreasers, dry cleaning solvents, kerosene etc). This may result in fire or explosions.
- Before using the machine for the first time, check that the transit bolt at the rear of the machine has been removed (see section on installation).
- Turn OFF the stopcock if the machine is to be left for any length of time (eg holiday) especially if there is no floor drain (gully) in the immediate vicinity.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning the use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be performed by children without supervision.



Caution

- The electrical safety of this appliance can only be guaranteed when continuity is complete between the machine and an effective earthing system, which complies with local and national regulations. It is most important that a qualified electrician regularly tests this basic safety requirement. The manufacturer cannot be held responsible for the consequences of an inadequate earthing system.
- For safety reasons do not operate this appliance on an extension cable. Extension leads do not guarantee the required safety of the appliance.
- There is danger of overheating.
- The machine is built in accordance with current safety requirements.
- Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept responsibility. Only authorised IFB Care Service Personnel should undertake repairs.
- The machine is completely isolated from the electricity supply only when it is switched OFF at the wall socket and the plug is taken out, or it is switched OFF from the main source, or the main fuse is taken out or MCB switched OFF.
- This machine must only be connected to the onsite water supply using a new hose kit. Old hoses must not be reused. Only genuine IFB original spare parts should replace faulty components. Only when these parts are fitted can the safety standards of the machine be guaranteed.
- If the connection cable is faulty, it must be replaced only by an IFB approved service technician to protect the user from danger.
- A washer and dryer should never be stacked without using the proper stacking kit. Doing so is extremely dangerous, as the dryer may vibrate off the washing machine during use.



About eWaste

eWaste or Electronic Waste or Waste Electrical and Electronic Equipment (WEEE) are the terms used to describe old, end-of-life or discarded appliances using electricity.

Dos

- Always dispose of products that have reached end-of-life by calling an authorised local eWaste recycler.
- Always drop off used electronic products, batteries or accessories at your nearest authorised eWaste recycler when they reach end-of-life.
- Whenever possible, or as instructed, sort packaging materials according to responsible waste disposal and recycling options.

Don'ts

 
- Do not dismantle electronic products on your own.
- Do not throw electronic products in bins with a 'Do Not Dispose' sign.
- Do not give eWaste to informal and unorganised sectors such as local scrap dealers and rag pickers.
- Do not dispose of your product in garbage bins along with municipal waste that ultimately reaches landfills.

- Do not pull the cord to disconnect the plug. Hold the plug itself. Do not insert or remove the plug with damp hands.
- Do not drag the washing machine if it contains the wash load or when in operation.
- Do not move the washing machine if it contains the wash load or when in operation.
- Do not spill water over the machine. In case of spillage, wipe dry. Avoid the machine coming in contact with floor cleaning chemicals.
- Do not wash or spray water over the switch or control panel.
- Do not wash shoes or utensils in the machine.
- Use detergent recommended for the washing machine.
- Keep your machine dry to avoid corrosion/rusting. Take special care to wipe the machine after cleaning coin trap.
- Check the labels on garments for the determining conditions under which fabrics are to be washed.
- The machine is tested with water during assembly for performance checking. Condensed droplets of water may remain inside the drum. It is advisable to run the machine without a wash load in the Cotton maximum temperature program with detergent for the first time after installation.
- Ensure that the machine is connected to a 3 pin socket with good earthing and 16 Amp MCB or other automatic short circuit protection devices.
- Textiles that have been pre-treated in solvent based cleaning agents must be thoroughly rinsed in clean water before being washed in the machine.
- Never use solvent based cleaning agents in this machine, as this may result in damage to component parts and create toxic fumes. Such detergents also pose a threat of fire and explosion hazards.
- If excessive vibrations observed on trolley, then trolley needs to be replaced immediately as it can affect reliability of machine thereby reducing the machine life.

Risks of Improper Handling of eWaste

eWaste usually includes components which, if disposed of improperly, hold environmental consequences such as air, water and soil pollution and also pose risks to human health.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. Components and materials used in the manufacture of this washing machine are fully compliant with provisions of hazardous substances outlined in eWaste Management Rules, 2016.



For Detailed Information and Disposal Request

Contact IFB Care at 08045845678/08069545678 and provide your details to our representative to request your product to be picked up for disposal.



- Only use dyes specified by the manufacturer as being suitable for use in a domestic washing machine. Always read the manufacturer's instructions carefully.
- Colour runs and dye removers contain sulphur compounds, which can cause damage such as corrosion. Do not use these products in this machine.
- For machines with a porthole door, remember that the porthole glass will be hot when washing at very high temperatures. Do not let children touch it.
- Always make sure that the drum is stationary before removing clothes. Reaching into a moving drum is extremely dangerous.

Flooding danger

- While hooking the drain hose into a wash basin, check that the water drains OFF quickly to prevent the sink from overflowing. Make sure the drain hose is secure so that the force of the water flowing out of the hose does not dislodge it. Otherwise, this will result in flooding.
- Take care to ensure that foreign objects (eg nails, pins, coins, paper clips etc) do not find their way into the machine with the washing. These may damage components of the machine (eg suds container, drum etc), which in turn can result in damage to the washing.

Contents

- Safety guidelines
- Safety instructions

Chapter 1: Getting started with your machine

- Installing your machine & safety guidelines
- Before you start

Chapter 2: Working your machine

- 6 easy steps to do your laundry
- Finishing
- Wash guide map
- Wash features

Chapter 3: Get more from your machine

- Tips for best results
- Maintenance and cleaning

Chapter 4: Useful information

- Troubleshooting
- Display
- Technical specifications
- Service record
- Warranty

PAGE

06
08

14
16

17
22
24
25

27
31

34
38
41
43
47

Warning Electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system which complies with local and national safety regulations. It is important that this basic requirement is present and regularly tested. When there is any doubt the onsite wiring system should be inspected by a qualified electrician. IFB cannot be held liable for consequences of an inadequate earthing system (eg electric shock etc).



Precautions This appliance conforms to safety requirements. Inappropriate use can lead to injury or damage to property. Please read this manual carefully. It contains information on safety, installation, use and maintenance.

Use only less foaming detergents in this machine to avoid inconvenience or damage. It will help you to use your new washing machine optimally and avoid accidents.

1

Getting started with your machine

Installing your machine & safety guidelines

1 Select the right spot




Unpack and place the new washing machine in proximity to both water and electrical connections. Ensure that the floor is properly levelled.

2 Removing the transit bolts

- Use a spanner to remove the transit bolts.
- Insert plastic caps provided.
- Keep the transit bolts carefully as they will be required in case you need to shift the machine again.
- Please do not operate the machine until the transit bolts have been removed.


3 Levelling

- Level the machine by using the adjustable screws provided at the bottom for levelling.
- Make sure that the machine rests on all four feet on a level surface.

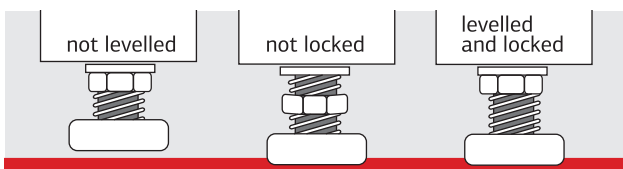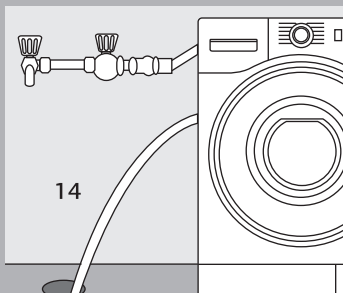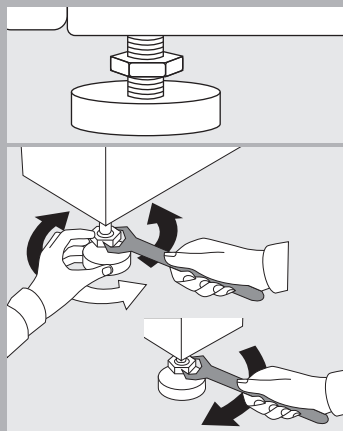



4 Connection to the water supply

 - The water inlet of the machine has a collar with parallel internal threads.
- The water supply point with an external thread/parallel thread should be available within 1 metre of the machine location.
- Do not stretch the water supply hose.





5 Connection to the drain hose

- The machine drains via a drain pump.
- Direct the end of the drain hose into a sink or a basin.
- The drain hose can be placed directly on the floor or can be extended and placed over the sink to a maximum height of 1 metre from the floor.

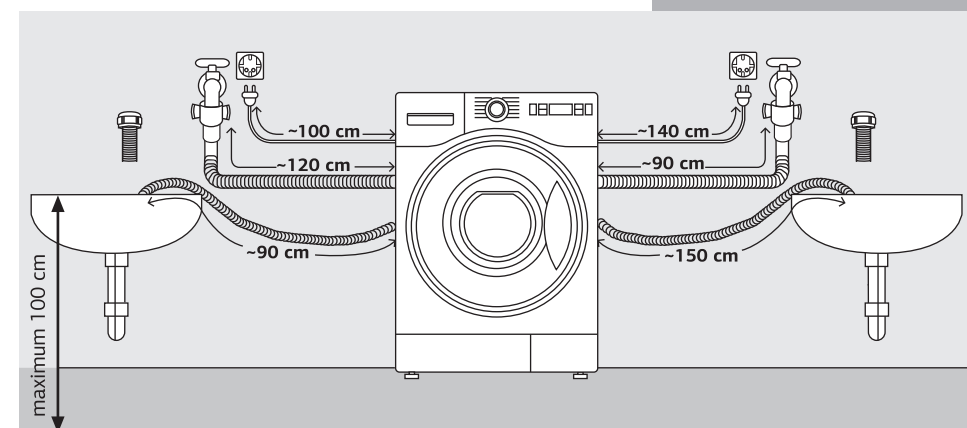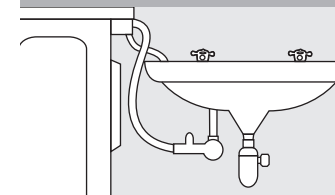

6 Electrical connection

- It is mandatory to have a 16 Amp, 3 pin 220–240 V AC, 50 Hz electrical point with a 16 Amp MCB or automatic short circuit protection device within 1 metre of the machine.
- Make sure your home has proper earthing and there is a firm connection between the plug and the socket. IFB recommends a separate MCB on the socket of the washing machine.
- Proper earthing of the power socket is critical to reliable performance.

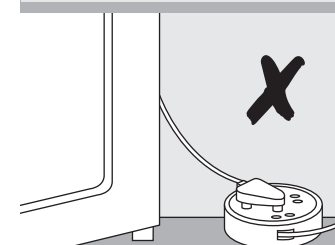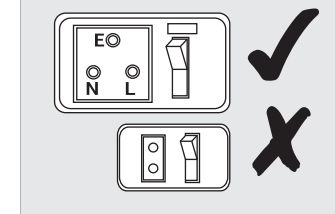

Before you start

Check your machine

Ensure that the washing machine has been installed and connected properly.

- **Electrical connection**

It is mandatory to have a 16 Amp, 3 pin 220–240 V AC, 50 Hz electrical point with a 16 Amp MCB or automatic short circuit protection device.

- **Water connection**

The water supply point with an external 3/4" parallel thread should be available within 1 metre of the machine location. Turn ON the water tap after the connection is secure.

- **Drain water hose**

Direct the end of the drain hose on to the floor or into a sink or basin up to a maximum height of 1 metre. Hook the hose over the edge of the basin and secure the same.

Your machine was tested before leaving the factory. To remove any water left over from testing procedures, the first wash cycle should be carried out without laundry in the washing machine.

- Turn ON the water tap.
- Pull out the detergent dispenser drawer completely.
- Pour approximately 20 grams of detergent into the detergent dispenser drawer.
- Close the detergent dispenser drawer.
- Set the Program Selector knob to Cotton and set maximum temperature settings.
- Press the Start/Pause button.
- When the End message is displayed switch OFF the machine.

Working your machine

6 easy steps to do your laundry


1 Sort the laundry

- Remove everything from pockets.
- Close zippers, hooks and strings.
- Pre treat collars, cuffs and stains.
- Sort the laundry.
- Check for wash care symbols/labels.


2 Load the laundry

- Check and remove any small articles or any laundry items left inside the drum or on rubber gasket.
- Place garments loosely inside the drum.
- Load garments one by one.
- Close the door and press till you hear a click.

3 Add detergent

- Pull out the detergent dispenser drawer completely.
- Dispense the correct amount of detergent.
- Close the detergent dispenser drawer.
- For heavily soiled clothes use Pre Wash 'I' option and add detergent.
- 'II' to be used for every wash program.
-  to be used to dispense additives. Use the fabric conditioner additives chamber and take care not to exceed the maximum level.
- If liquid detergent is used, please insert the liquid detergent dispenser supplied into the main wash chamber. This ensures that the liquid enters the drum at the right stage of the wash cycle.

***Note** Always use detergents recommended for front load washing machines. Follow the detergent package directions as using too little or excessive detergent is a common cause of laundry problems. Soap flakes or granulated soap powders should not be used in your washing machine. When washing woollens or silk, remember to use the detergent type recommended by the manufacturer.

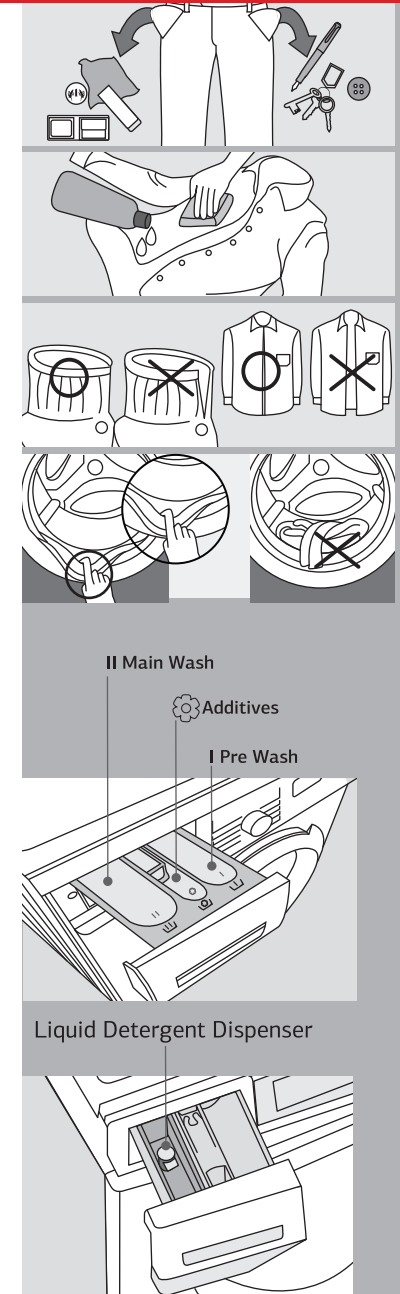

Select Program

- Switch the machine ON.
- Turn the Program Selector knob to the required program position. Start/Pause LED will flash.

PROGRAM	TYPE OF LAUNDRY
Cotton  / Cotton Eco	Cotton colour-fast garments such as shirts, pants, uniforms, bed and table linen, towels, nightdresses, pyjamas, underwear etc.
Synthetics 	Daily-wear garments that are made of polyester, acrylic or polyamide.
Quick 30	Lightly soiled coloured laundry, made of cotton, linen, synthetic or blended fabrics.
CradleWash® 30	Hand wash only delicates, washable fabrics made of silk (lingerie), satin, synthetic or sheer fabrics.
Woollens 30	Machine washable wool garments only. A neutral wool wash detergent is recommended.
Mixed 40 	Various types of cotton, synthetic or easy care garments except special garments such as silk/delicates, dark clothes, wool, duvet, curtains etc..



Choose wash/additional option

- Available options to a program will be shown by the flashing LEDs of the corresponding buttons. If the LEDs do not flash, those program options are not applicable. The default/selected option is indicated by a glowing LED. The program time will be updated automatically.

Change/cancel the program

- To change/cancel the program during the machine run, rotate the Program Selector knob to the OFF position and wait for 2 secs. Then select the new program.

***Note** To select Spin Dry Program, switch ON the washing machine, rotate the Program Selector to the Spin Dry/Tub Clean position. Select required Spin Speed and then press the Start/Pause button. To select the Tub Clean Program refer to the Maintenance and Cleaning section.

Select wash option


Delay Start

- Before starting the program, you can specify the time when the program starts.
- Press the Delay Start button once to select the Delay Start option.
- The first press of the Delay start button will display 00 delay time, second press will select 1:00 hr delay time, third press will select 2:00 hrs delay time, further press will update the delay time by 1:00 hr each till 19:00 hrs.
- The corresponding LED will glow to indicate that the option has been selected.
- You can choose other options or press the Start/Pause button to start the program.



Pre Wash/Steam Selection

- If the Pre Wash option is selected, the clothes are given a preliminary wash before the main wash.
- Press and hold the Steam button for 3 secs to select Pre Wash option.
- A single beep will indicate that the option has been selected.
- You can choose other options or press the Start/Pause button to start the program.

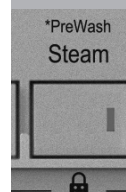

Steam

- Press the Steam button to select or deselect the Steam option.
- The Steam symbol will glow indicating the selection of Steam option.
- If the Steam option is selected, steam is produced inside the drum at the most effective time to enhance the wash.



Note

- Steam option can be selected for Cotton 40°/60°, Synthetics 40°/60° and Mixed 40° Programs.
- It is normal that steam may not be visible during the wash/steam cycle.
- Do not touch the door during the steam cycle as the surface may be very hot.
- Do not attempt to open the door forcibly or reach into the machine the steam cycle. The steam can cause severe burns.

Extra Rinse

- An additional rinse cycle is executed to remove any detergent residue from the clothes and make them softer.
- Press the Extra Rinse button to select or deselect the Pre Wash option.
- The corresponding LED will glow to indicate the option selected.
- You can choose other options or press the Start/Pause button to start the program.



Spin Speed


- Spin Speeds between 600RPM to 800RPM can be selected for 6 Kg model and 700RPM to 1000RPM for 6.5 Kg model.
- To select No Spin rotate the knob anti-clockwise to the  position till you hear a gentle click.
- The knob should not be turned beyond High RPM clockwise or beyond the  position anticlockwise
- You can choose other options or press the Start/Pause button to start the program.

	6.0 Kg	6.5 Kg
High	800RPM	1000RPM
Med	700RPM	900RPM
Low	600RPM	700RPM

***Note** If the Spin Speed knob is set to High RPM, the maximum speed limit will depend upon the program selected.

Important Additional Wash Options give you more freedom in case you have a special need. So use as needed.

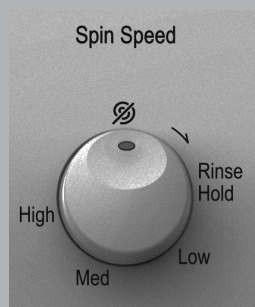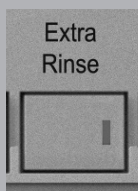**Rinse Hold**


- Rinse Hold pauses the program during the final rinse. If clothes are left unattended after the final spin for a long time, it will cause creasing. During Rinse Hold, clothes will remain stationary in the water after the additives rinse. At the Rinse Hold stage, the Start/Pause LED will flash. The program will remain on hold for the user to select Spin Speed/No Spin  or press the Start/Pause button.
- To select the Rinse Hold option, turn the Spin Speed knob to the Rinse Hold position.
- You can choose other options or press the Start/Pause button to start the program.

 
Child Lock

- You can safeguard your washing machine to prevent any unintentional changes to the selected options and to the program sequence by activating the Child Lock.
- The Child Lock option can be activated only after starting the program.
- To select the Child Lock, press and hold the Delay Start and Extra Rinse buttons simultaneously for 2 secs.
- The Child Lock LED will glow if the Child Lock has been activated.

If the Child Lock has been activated

- No changes can be made while the program is running.
- If the appliance is switched OFF and then back ON while a program is running, the program will continue from the point at which it was interrupted.
- The door will remain locked at the end of the program. The Child Lock can be disabled by pressing the Delay Start and Extra Rinse buttons together for 2 secs till the Child Lock LED goes OFF.

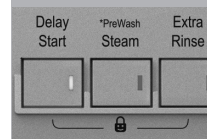

Start
Pause


Start washing

- Press the Start/Pause button to start washing. The Start/Pause LED will glow.
- To interrupt the cycle and change option or to add/remove laundry, press the Start/Pause button once to pause the program.
- The door LED will go OFF when locked, flash when the door is unlocking, and glow when the door is unlocked (ready to open).
- It will not be possible to open the door when the water level inside the drum is above the rubber sleeve level or if the water temperature inside the drum is high.
- Time remaining to complete the program cycle can be seen on the Digital Display.

Finishing

Please ensure you take the following steps after the program has ended to ensure the safety of your machine.


- When the program ends, the END message will be shown on the Digital Display.
- Door LED will glow to indicate that the program has ended.
- The machine has been programmed to switch OFF all visual displays such as LEDs to save energy. Start/Pause LED will slowly blink after END of the program. This is in line with the latest Energy Using Product norms (EUP).

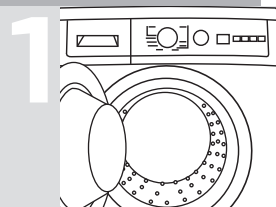

1
Open door and
remove laundry



2
Turn the machine OFF and
leave the door slightly open.
Switch OFF the input power
supply to washing machine

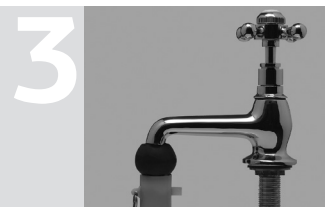

3
Turn OFF tap

Washing symbols—a guide



Resistant material



Delicate fabric



Washable at 95°C



Washable at 60°C



Washable at 40°C



Washable at 30°C



Hand wash



Dry clean only



Wool seal



Bleachable in cold water



Do not bleach



Do not dry clean



Dry flat



Hang to dry



Dry on clothes hanger



Tumble dry, normal heat






Tumble dry, reduced heat



Do not tumble dry

Wash guide map

Program	Options						Spin Speed		Laundry Weight Kg	
	Pre Wash	Extra Rinse	Rinse Hold	Steam	Delay Start	6 Kg	6.5 Kg	Temperature °C	6 Kg	6.5 Kg
Cotton 	✓	✓	✓	✓	✓	600–800RPM/ No Final Spin	700–1000RPM/ No Final Spin	Cold, 40 60, 90	6.0	6.5
Cotton Eco	✗	✓	✓	✗	✓	600–800RPM/ No Final Spin	700–1000RPM/ No Final Spin	40, 60**	6.0	6.5
Rinse+Spin	✗	✓	✓	✗	✓	600–800RPM/ No Final Spin	700–1000RPM/ No Final Spin	✗	6.0	6.5
Spin	✗	✗	✗	✗	✓	600–800RPM/ No Final Spin	700–1000RPM/ No Final Spin	✗	6.0	6.5
Synthetics 	✓	✓	✓	✓	✓	600–800RPM/ No Final Spin	700–900RPM/ No Final Spin	Cold, 40 60	3.0	3.0
Quick 30	✗	✓	✓	✗	✓	600–800RPM/ No Final Spin	800RPM/ No Final Spin	30	2.0	2.0
CradleWash® 30	✗	✓	✓	✗	✓	600RPM/ No Final Spin	600RPM/ No Final Spin	30	2.0	2.0
Woollens 30	✗	✓	✓	✗	✓	800RPM/ No Final Spin	800RPM/ No Final Spin	30	2.0	2.0
Mixed 40 	✓	✓	✓	✓	✓	600–800RPM/ No Final Spin	700–900RPM/ No Final Spin	40	3.0	3.0

✓ Option available and can be selected.

✗ Option not available and cannot be selected.

Depending on water pressure, water hardness, water inlet temperature, quantity and type of textile, detergents used, foam detection, unbalance detection, degree of soiling, ambient condition, selected additional function and power supply fluctuations, the actual values given in the User Manual or with the machine, can deviate from the declared standard values, as they are tested according to laboratory conditions. Program time can also skip or extend due to above the mentioned conditions.

**Program setting for BEE test in conformity with IEC 60456 with maximum spin speed selection settings.

Note The design and specifications (includes colour/shades/aesthetic/features etc.) are subject to change without prior notice due to continuous improvement and product development. Steam option is not available for Cotton Cold/90°C and Synthetic Cold Programs.

Wash features

Inbuilt Easy Iron

A feature that reduces wrinkling of clothes after the final spin, making them easy to iron. Using a lower spin speed can help reduce creasing.

Quick Wash

A special program to help wash your clothes faster. Good for gym clothes.

Eco Wash

A special program that gives the best wash quality using optimum energy and water.

Child Lock

This safety feature prevents the program selection being tampered with by children.

Auto Restart

Program resumes from the interrupted point on resumption of power supply.

2D Shower System

Scoops on the inner drum pick up water and also deliver a shower through perforated fins on the laundry when the drum rotates. This ensures thorough wetting of clothes.

Pre Wash

Soiled clothes are put through a preliminary wash before the main wash to dislodge the dirt



2



Laundry Add Option

Lets you add laundry even after wash cycle has started.



Cool Down Cycle

Hot water drained after the main wash cycle can be harmful for people and the environment. Hot water is cooled down by taking on additional cold water automatically before draining.



Auto Balance System

If the wash load is very unevenly distributed, the washing machine will redistribute the load to balance it inside the drum. In this process, the washing machine will start and stop during rotation cycles as it balances the load.



 
Start/Pause (Program Interrupt)

Gives you the liberty to start and pause the program whenever you want.



High-Low Voltage Protection

A smart microcontroller continuously monitors the online voltage fluctuations and temporarily stops the program to protect the machine in case the voltage drops below 150 ± 10 V or rises above 270 ± 10 V. The program will resume once the voltage is within safe operating range.



Aqua Energie

Energises water to get the best out of detergents and takes it deep inside the fabric to dislodge the dirt.

CradleWash®

India's first wash program for delicate fabrics provides gentle care that uses a soft, to-and-fro, rocking movement.

Powered by AI

A neural network-based algorithm detects the weight of laundry. It then optimises the wash—duration, water level, wash actions and the level of gentleness needed. "AI" will be shown on the display for the applicable cycles.

Note available on selected models only

3

Get more from your machine

Tips for best results

Before washing

- Empty all pockets.
- Remove metal parts.
- Close any zips and fasten hooks etc before washing.
- Do not wash anything in the machine that is specified as non-machine washable on the wash care label.

While sorting

- Separate polyester fabrics from cotton fabrics.
- Try to have a mix of large and small clothes in each wash load.
- Dark clothes should be washed separately and not with whites.

While loading

- Load large items first, preferably half the total wash load.
- Do not wash single items—add one or two similar items.
- Place small items such as infants' socks, nylon stockings, handkerchiefs etc in a laundry bag, pillow case, or something similar, as they may get caught around the door. This will also prevent your laundry from getting lost.

Water softening

- Use water softening agents or adjust detergent dosage as recommended by the detergent manufacturer in case of hard water.

Easy tips to remove stains

- Ensure you use WARM water for soaking or pre washing stained laundry.
- Fresh stains are easier to remove.
- Knowing what kind of stain it is, how old it is, what kind of fabric it is and whether the fabric is colour-fast (check the care label) always helps treat a stain better.
- Always start with COLD or WARM water as HOT water can set in stains. Washing and drying can sometimes set in stains.
- When bleach is recommended, always use a fabric safe one.
- Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off the fabric instead of through it.

STAIN	TREATMENT
Chewing gum, Adhesive tape, Rubber, Cement	Use ice in a plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits.
Blood	Rinse immediately in COLD water. If stain remains, soak in COLD water with an enzyme pre wash.
Chocolate, Cocoa	Sponge with COLD water and soak in an enzyme pre wash. If stain persists, rub a little detergent and rinse in COLD water.
Coffee	Blot up quickly and rinse out in COLD water. Rub in a little detergent and wash in the maximum temperature allowed for the fabric type.
Cream, Milk, Ice-cream	Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits.


STAIN	TREATMENT
Deodorant	Rub affected area with white vinegar and then rinse out in COLD water. Sponge with white spirits. Treat stiffened areas with enzyme pre wash.
Egg	Soak in a COLD enzyme pre wash, rinse and wash normally.
Fabric softener	Rub affected areas with bar soap and wash normally.
Fruit	Treat as soon as possible by sponging with COLD water. Rub a little detergent on the stain and wash normally.
Grass	Sponge with white spirits. Rub in an enzyme pre wash and wash normally.
Grease, Oil	Lay the affected area face down on an absorbent cloth and work from the back. Sponge with white spirits or dry cleaning fluid. Wash normally.
Iron, Rust	Apply lemon juice and salt and place in the sun. Wash normally.
Collars, Cuffs, Cosmetics	Pre-treat with pre wash stain remover or rub with bar soap.
Mildew	Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally. If stain persists and fabric allows, use a bleach.
Mud	Brush off dry mud and rinse in COLD water. If stain persists rub in a little detergent and wash normally.

STAIN	TREATMENT
Paint—oil based	Scrape off any fresh paint and sponge with a non-flammable dry cleaning fluid and wash normally.
Paint—water based	Treat while still wet. Rinse in WARM water and wash normally.
Scorch marks	Dampen a cloth with hydrogen peroxide, lay it over the affected area and press with a fairly HOT iron.
Ink	Some inks may be impossible to remove and washing may even set it in. Use pre wash stain remover, denatured alcohol or non-flammable dry cleaning fluid.
Nail polish	May be impossible to remove in some cases. Place stain face down on paper towels. Apply nail polish remover to the back of stain. Repeat, placing paper towels frequently. Do not use on acetate fabrics.
Shoe polish	Liquid: Pre-treat with a paste of granular detergent and water. Paste: Scrape residue from fabric. Pre-treat with pre wash stain remover or non-flammable dry cleaning fluid. Apply detergent into dampened area and wash using bleach safe for fabric.
Candle wax, Crayon	Scrape off surface wax. Place stain face down between paper towels. Press with WARM iron until wax is absorbed. Replace paper towels frequently. Treat remaining stain with pre wash stain remover or non-flammable dry cleaning fluid. Hand wash to remove solvent and wash using bleach safe for fabric.

Maintenance and cleaning of your washing machine





Cleaning the detergent dispenser drawer

- Remove detergent residues regularly.
- Pull out the detergent dispenser drawer.
- Clean the detergent dispenser drawer with WARM water.
- Clean the siphon. Remove the siphon from the compartment and wash under running WARM water.
- Detergent residues can build up in the water jets on top of the detergent dispenser drawer housing.
- Before fixing the detergent dispenser drawer use a bottle brush to clean them out.

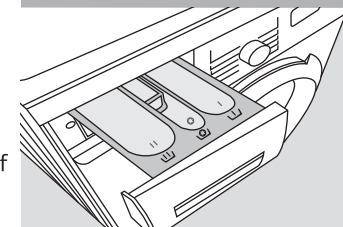

Cleaning the water hose mesh filter

- Turn OFF taps. Disconnect power supply to the machine. Unscrew the inlet hose from machine and the tap. Drain out water from the hose.
- Remove the filter mesh from the tap end of the inlet hose and clean under running water with a brush.
- Pull the sieve out of the magnetic valve with a pair of flat nosed pliers. Clean the sieve under running water with a brush. Then fit the sieve back into the valve.

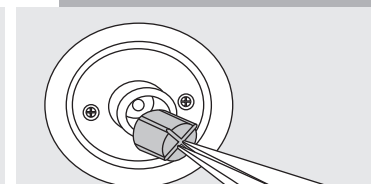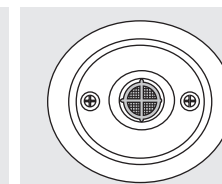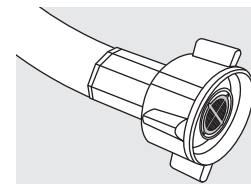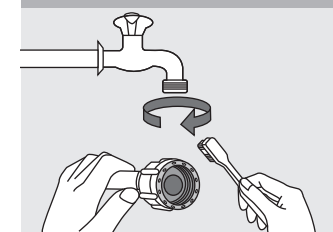


- Screw inlet hose back to the machine and the tap. Ensure that the sieve and filter are in place. Turn ON water tap to check if the connection is watertight.


Note Presence of excess dirt/sediments/sand in water can affect the wash quality as well as the reliability of water inlet valve

Cleaning the filter

- Filter should be cleaned frequently in order to increase the life of the drain pump.

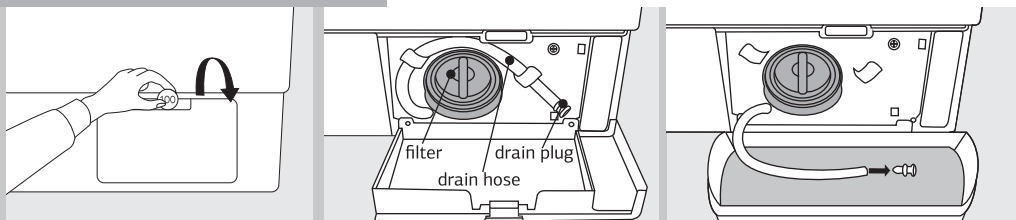

- Open the detachable bottom door by using a coin or key.
- Place a shallow container near the bottom door. Pull out the drain hose and open the drain plug to drain out the water from the machine in the container.
- After draining the water through the drain plug, open the filter by rotating it anti-clockwise and remove foreign objects like coins, pins or hooks, if any.

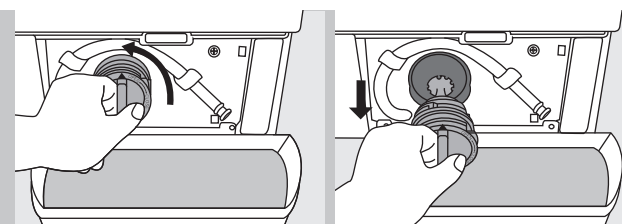


- Tighten the filter and drain plug to their original positions and close the bottom door.
- Do not open the filter during a program run.

Use of Descalant

- Use Descale after a minimum of 24 months of installation.
- Do not use Descale with Tub Clean. Tub Clean does not need any additive.
- Use Descale after 6 months, or more, as per hardness of water in your water supplies.
- Use only one Descale packet at one time. Do not use more.

DESCAL
Appliance Descaler
brought to you by IFB.
Call IFB Care for details.

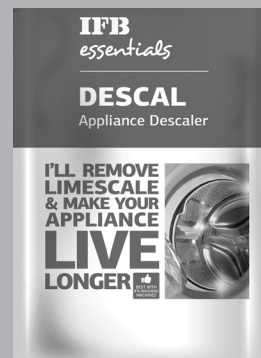

Cloth weights

Bottoms

Lungi/Dhoti	200 g
Skirt	200 g
Trousers	250 g
Jeans	400 g

Tops

Cotton shirt	280 g
Other shirt	200 g
Cotton blouse	140 g
Other blouse	100 g
Woollen sweater	400 g
Heavy sweater	300 g
Light sweater	150 g

Other clothes

Cotton saree	650 g
Synthetic saree	350 g
Bath towel	600 g
Hand towel	250 g
Pyjama kurta	400 g
Panties	60 g
Cotton vest	100 g
Underslip	100 g
Long socks, (2 pairs)	150 g
Short socks, (2 pairs)	85 g
6 handkerchiefs	85 g
12 napkins	1.1 Kg

Sheets

Cotton (double)	1 Kg
Cotton (single)	500 g
Non cotton (double)	650 g
Non cotton (single)	400 g

Pillow slips

Cotton pillow slip	110 g
Other pillow slip	85 g

Tablecloths

Small	230 g
Large	600 g
Table napkins (4)	150 g

Bedspread

3 Kg

Blankets

Wool	2 Kg
Acrylic	1.5 Kg



Let's make washing easier.
Here is a list of clothes
and their approximate
weights to help you figure out
a perfect wash load.

Laundry Items	6 Kg	6.5 Kg
Bath towels	2	2
Shirts	3	4
Blouses	2	2
Skirts	2	3
Pair of pants	1	1
Pairs of jeans	2	2
T-shirts	3	3
Sets of pyjamas	3	4
Tea towels	2	2

The chart indicates average weights of clothes. The recommended weight of your wash load should not be exceeded to ensure that your machine gives your clothes an effective wash. Suggested weights are approximate and may vary.

Troubleshooting

When the washing machine does not function properly, check the following points before you contact your service provider.

SYMPTOM Digital Display does not glow.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> Power supply is not turned ON. Electrical power cord may not be plugged in or connection may be loose. Program Selector knob is in OFF position. 	<ul style="list-style-type: none"> Ensure that the supply mains switch is ON. Make sure that the plug is plugged in and check for loose connection in plug/socket. Ensure that the Program is selected

SYMPTOM Washing machine door does not open.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> Machine is in operation. Door LED is OFF. Child Lock is active. 	<ul style="list-style-type: none"> Check if the program is active. If yes, pause the program and check the door LED. For safety reasons, the washing machine door cannot be opened when the water level, temperature or speed is too high. Check if the door LED is OFF. The door will open only when the door LED is ON. Deactivate the Child Lock and wait for 1–2 min till the door LED glows.

SYMPTOM Program does not start.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> Start/Pause button not pressed. Water supply tap not turned ON/ no water supply/low water pressure. Door not closed properly. Program either in Pause or Rinse Hold mode 	<ul style="list-style-type: none"> Ensure that the Start/Pause button is switched ON. The : symbol will blink when it is pressed and the Start/Pause LED will glow. Open the tap fully and ensure that there is water supply with normal water pressure. Open and close the door firmly. Check the Digital Display or the LED status and refer to the User Manual.

SYMPTOM Water does not enter into the machine. Detergent not being flushed into the drum.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> Water supply tap not turned ON/ no water supply/low water pressure. Door not closed properly. Bent inlet hose, sieve or inlet valve/inlet hose clogged. 	<ul style="list-style-type: none"> Open the tap fully and ensure that there is water supply with normal water pressure. Open and close the door firmly. Check if the inlet hose is bent or sieve is blocked.

SYMPTOM Suds escaping from detergent dispenser tray. Excessive foam in drum. Residues of detergent on clothes.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> Detergent used is not a Front Loader detergent. Excessive detergent used. Overloading of clothes. Cold Wash Program. Low water pressure. 	<ul style="list-style-type: none"> Use detergent recommended for Front Loader washing machines only. Reduce the detergent dosage. Do not overload the washer. Use Hot Wash Program. Start when water pressure is normal.

SYMPTOM Water leakage from machine.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> Inlet hose connection loose. Filter not tightened. Inlet hose leaking. 	<ul style="list-style-type: none"> Check and tighten the inlet hose connection. Check and tighten the filter. Contact IFB Care.

SYMPTOM Machine does not drain.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> Filter clogged. Drain hose end above 1 metre from the floor. Drain hose kinked or clogged. 	<ul style="list-style-type: none"> Check and clean the filter. Drain hose should be placed below 1 metre to the floor Clean and straighten the drain hose.

SYMPTOM Machine does not spin or clothes stay wet.**PROBABLE CAUSE**

- Load is too small. Unbalanced load.
- Overloading of clothes.
- Spin speed is set to ORPM or lower Spin Speed is selected.
- Rinse Hold option selected.
- Filter clogged.
- Excessive/high foaming detergent.

SOLUTION

- Add 1–2 similar items to help balance the load Rearrange load to allow proper spinning.
- Load clothes as per the fabric type and capacity recommended for the chosen program.
- Select higher Spin Speed.
- At Rinse Hold stage press Start/Pause button.
- Check and clean filter.
- Use detergent recommended for Front Loading washing machines only.

SYMPTOM Machine vibrates more during spinning.**PROBABLE CAUSE**

- Machine not levelled properly.
- Filter clogged partially.
- Unbalanced load.

SOLUTION

- Check and level the machine.
- Check and clean the filter.
- Add 1–2 similar items to help balance the load. Rearrange load to allow proper spinning.

SYMPTOM Motor noise.

- It is normal for noises to be heard while motor is running.

SYMPTOM Pump noise.

- It is normal for noises to be heard from the pump during the start up and final stage of draining. However check for filter clogging.

**SYMPTOM Program cycle time delayed.
Balance time on display remains unchanged.**

- It is normal as the washing machine time may vary depending upon the type and quantity of laundry, inlet water pressure, inlet water temperature, variations in power supply and other usage conditions.
- If the load is unbalanced then the machine may make several attempts to redistribute the clothes in order to minimise the vibrations resulting in extended program duration.

SYMPTOM Poor soil removal.**PROBABLE CAUSE**

- Incorrect detergent dosage.
- Use of Cold Wash Program.
- Load size not as per capacity.
- Stains on clothes.
- Mix of heavily soiled items with lightly soiled items.

SOLUTION

- Use correct amount of detergent for load size and water hardness.
- Use Hot Wash Program.
- Use correct load size.
- Pre-treat stain and any soil (Refer topic Easy tips to remove stains).
- Separate heavily soiled items from lightly soiled ones.

SYMPTOM Blue stains on clothes.**PROBABLE CAUSE**

- Excessive fabric additives.
- Cheaper quality additives.

SOLUTION

- Do not overfill fabric softener and do not pour liquid fabric softener directly onto fabric.

SYMPTOM Black or grey marks on clothes.**PROBABLE CAUSE**

- Less quantity detergent/hard water.
- Some clothes already with existing stains.

SOLUTION

- Use correct amount of detergent for load size, amount of soil and water hardness.
- Do not mix good clothes with stained clothes.

SYMPTOM Yellow or brown rust stains.**PROBABLE CAUSE**

- Dirty incoming water.

SOLUTION

- Before washing, run water for a few minutes to clean lines or start the program only when the water is clean.
- To restore the discoloured load of whites use a rust remover safe for fabric.

SYMPTOM Residue of detergent.**PROBABLE CAUSE**


- Overloading of clothes.
- Excessive use of detergent.
- Cold Wash Program.

SOLUTION

- Do not overload the washer.
- Use proper amount of detergent.
- Use Hot Wash Program.

If the problem persists, contact IFB Care.

Display

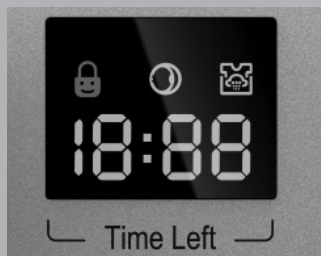

The Digital Display gives you complete information

- Balance time of the program.
- Door status.
- Spin Speed.
- Problem/fault indications, if any.
- Child Lock and Delay Start selection.

Important If Program Selector is rotated during program run, P XX will be shown on the Digital Display. (XX will be 01 for Lightly Soiled, 02 for Normally Soiled...15 for Synthetic)

For any code which is not present in the following list or if the suggested solution doesn't fix the problem, call IFB Care or dealer.

DISPLAY MESSAGE

PROBABLE CAUSE

SOLUTION

E1

Door not getting unlocked

Switch the Program Selector knob to the OFF position. Wait for 2 min and check if the door can be opened. Do not try to open the door forcibly. If the door cannot be opened or if the same message is displayed, switch OFF the appliance and contact IFB Care.

DISPLAY MESSAGE

PROBABLE CAUSE

SOLUTION

E2

Water tap turned OFF.

Turn ON the tap.

Water supply not available or low water pressure.

Washing machine will start automatically on resumption of water supply.

Sieve/filter blocked in water inlet hose.

Clean sieve filter (Refer Cleaning water hose mesh filter).

Bent/damaged water inlet hose.

Remove bend/damage.

E6

Cloth trapped between drum and door area.

Switch the Program Selector knob to the OFF position and wait for 2 secs. Run the Drain program. After END, rearrange the clothes and restart the required program. If the same message appears again, switch OFF the appliance and contact IFB Care.

E3

Water not drained.

Press the Start/Pause button to restart the drain.

Filter is blocked.

Switch OFF the appliance. Drain out the water using drain plug and then clean filter.

Exhaust hose clogged/bent. Clean exhaust hose/remove bend.

DISPLAY MESSAGE**PROBABLE CAUSE****SOLUTION**

E7

Water temperature is above 60°C at the start of the program.

Start New/Drain Program once the water cools down to approximately 60°C.

Switch the Program Selector knob to the OFF position, wait for 2 secs and restart. If the same message appears again, switch OFF the appliance and contact IFB Care.

E8

Switch the program Selector to OFF position, wait for 2 secs and restart. If the same message appears again turn OFF the tap, switch OFF the appliance and contact IFB Care.

E9

Input voltage is high.

Machine will start automatically after the voltage decreases to safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.

Input voltage is low.

Machine will start automatically after the voltage increases to safe operating level. If this error display persists or occurs frequently, contact your electrician to locate the fault in the electrical system

E4

Laundry load is unbalanced. If laundry load is small (eg a pair of jeans, 2–3 Turkish towels, a bathrobe etc) it can lead to an unbalanced condition. Add 1–2 similar items to help balance the load and rearrange the load to allow proper spinning.

Technical specifications

Model	Diva Plus VXS/BXS 6008 Elena SXS/SBS 6510
Power supply	220–240 V Single Phase 50 Hz
Dimension Net Size (W X D X Hcm)	59.8 x 51.3 x 87.5
Net weight	64 Kg (6 Kg)/65 Kg (6.5 Kg)
Capacity	6.0 Kg of dry cotton load (6 Kg) 6.5 Kg of dry cotton load (6.5 Kg)
Wash care programs	15 (>100 with options)
Selector buttons	Delay Start, Steam/Pre Wash Extra Rinse, Start/Pause
Selector knob	Program Selector, Spin Speed Selector
Spin speed	600–800RPM or Spin Cancel (6 Kg) 600–1000RPM or Spin Cancel (6.5 Kg)
Water consumption*	≤ 9 Ltr/Kg/Cycle
Water pressure	0.3 Bar–10 Bar (3.5–10 Ltr/min)
Power Rating	Refer product label
Drain pump rating	30 W
Heater rating	2000 W
Drum	Stainless steel

*Program Settings for BEE test in conformity with IEC 60456

IFB CARE

**CALL 08045845678/
08069545678**



4

Service record

[illegible]

IFB
Set Yourself Free

Businesswoman
in the morning

Blogger by evening
Indulge in your passion.
Do more with your time.
Set Yourself Free with IFB.

Installation report

Model _____ Serial no _____

Customer's name _____

Phone (residence) _____ (office) _____

Address _____

Installation check points

Machine delivered on _____

Machine installed on _____

Service engineer to tick appropriately

• Any major transit damage to the machine observed?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Condition of earthing? Plug Point (16 Amp 220–240 V AC with MCB or other automatic short circuit protection devices) good. If poor, has customer been advised to correct the same?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Advised to turn OFF machine after use?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Voltage cut out (high/low) fitted if voltage fluctuations high in area?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Machine levelling procedure and importance explained?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Detergents and bleach recommendation relevant DD tray chambers explained?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Safety instructions explained?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained all features of washing machine to the customer?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Display function explained (if applicable)?	yes <input type="checkbox"/>	no <input type="checkbox"/>

Service engineer to tick appropriately		
• Explained procedure for cleaning rubber sleeve/coin trap/inlet hose filter?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained common error codes (if applicable)?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained unbalance error in Spin mode?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained program selection, program and button options (or knobs), indicator lamp/status LED/LCD function, buzzer function (if applicable)?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained troubleshooting?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Check following for proper order		
- Inlet hose	yes <input type="checkbox"/>	no <input type="checkbox"/>
- DD tray	yes <input type="checkbox"/>	no <input type="checkbox"/>
- Rat protection mesh fitted (if applicable)	yes <input type="checkbox"/>	no <input type="checkbox"/>
- Drain hose	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Informed user of need to keep drain hose straight and maximum height of draining?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Demo given to customer?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Warranty terms explained?	yes <input type="checkbox"/>	no <input type="checkbox"/>

Installed by _____ Signature _____

Customer's response

- The installation person was courteous and helpful ☐ yes ☐ no
- I would describe my experience with the process of installation as
Unacceptable ☐ Satisfactory ☐ Non-satisfactory ☐ Very satisfactory ☐

I certify that the above information and checks have been done to my satisfaction and I am fully satisfied with the installation of the washing machine.

Customer's signature **Date** **Time**

Warranty—customer copy

Model _____

Serial no _____

Dealer's name _____

Date of purchase _____

Customer's name _____

Address _____

Phone _____

Email _____

Motor serial no _____